

EZ Edge™ System



Installation Instructions

Installation Instructions

Step 1

Set the EZEdge™ form with the steel flush with the finished surface of the slab.

Step 2

For long runs, butt form together insuring that the steel overlaps are flush with each other.

Step 3

Set the EZdowel™ load transfer dowels in the EZform™ form board.

Step 4

Check for proper alignment and that all dowels are set.

Step 5


Pour and finish the first slab. Use internal vibration to consolidate concrete under the EZdowel™ plate per ACI specifications. Remove concrete paste from the top of the plate during finishing.

Step 6

Remove the shipping bracket from the EZEdge™ plate and remove the form.

Step 7

Pour and finish the second slab. Use internal vibration to consolidate concrete under the EZdowel™ plate per ACI specifications. Remove concrete paste from the top of the plate during finishing.

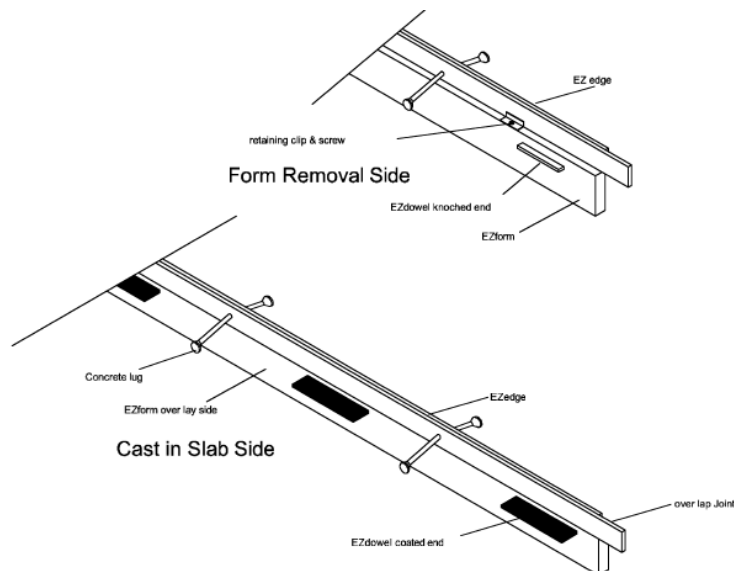

Superior Products for the Concrete Flooring Industry

1-866-913-8363
www.McTechGroup.com